


# Panasonic




Please follow these assembly instructions.

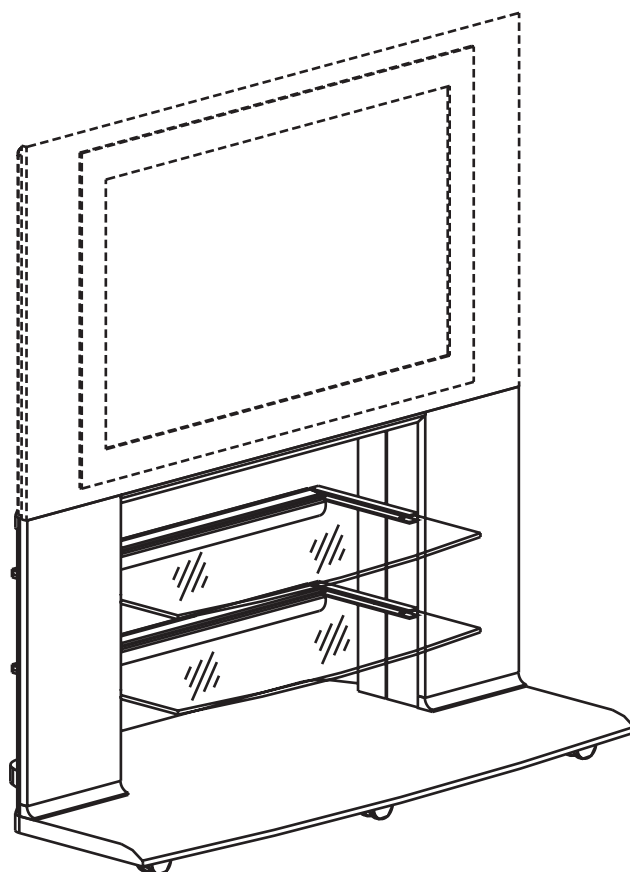

**TY-42PV30NZ**


**BUS4804**

Designed specifically for 42PV30A

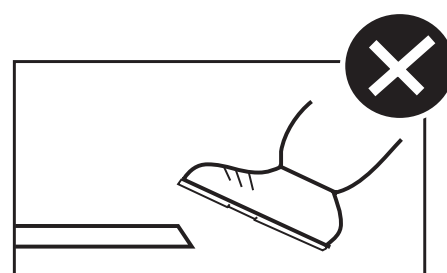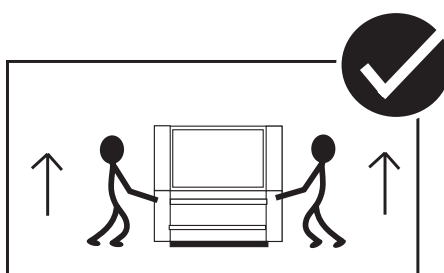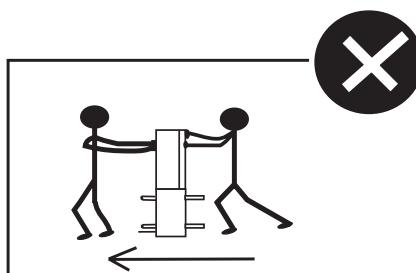

**IMPORTANT:** DO NOT PUSH OR PULL THE TV TO MOVE THE CABINET.

# Unpack & Identify Parts

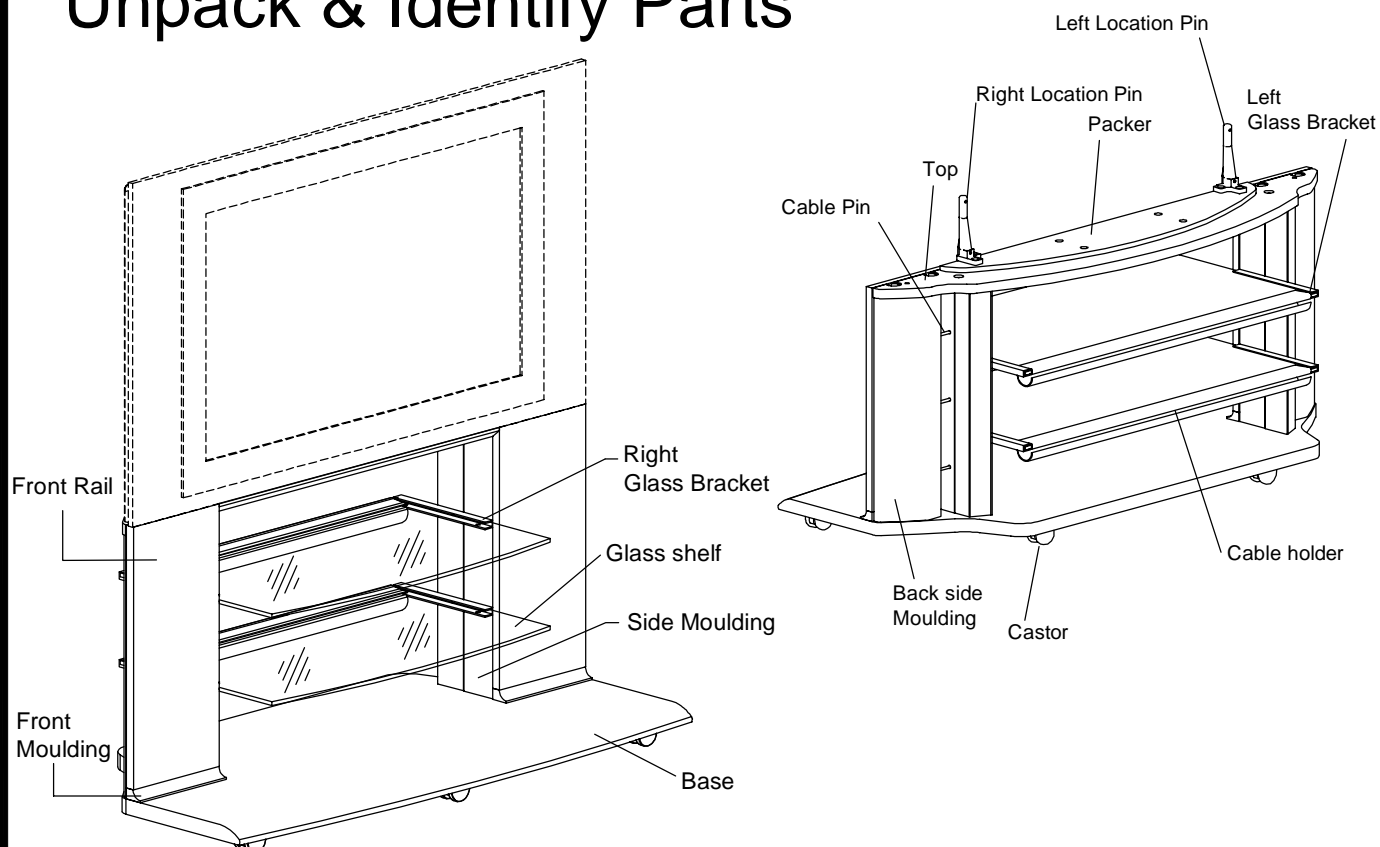

## CARTON CONTENTS

Part Description	Quantity	Part Number
Top	1	M19721A1PO
Packer	1	M19722A1PO
Base	1	M19723A1PO
Front Rail	2	M19591B2PO
Front Mouldings	2	M19595A2PO
Back Side Mouldings	2	M19592A1DF
Side Mouldings	2	M19619B1DF
Left Glass Bracket	2	M19596A1PO
Right Glass Bracket	2	M19597A1PO
Glass Shelf	2	PG0303A0
Castor	5	P815056
Cable Holder	2	P816177
Right Location Pin	1	P816178A
Left Location Pin	1	P816179A
Threaded Rod	2	P816172
Hardware Pack	1	MH1101A0

## Customer Service

AUSTRALIA - AFTER SALES SERVICES: CALL - 02 9453 9555  
NEW ZEALAND - CALL 0800 CRITERION (0800 274-837) OR FAX 0800 119-444.

[www.criterionfurniture.com](http://www.criterionfurniture.com)

FOR MISSING OR FAULTY PARTS: PLEASE RECHECK YOUR PACKAGING TO ENSURE THAT PARTS ARE MISSING, THEN WRITE OR CALL YOUR CLOSEST SERVICE CENTRE, PROVIDING THE DETAILS BELOW.

1. MODEL NUMBER OF THE UNIT PURCHASED
2. COPY OF YOUR PURCHASE SLIP
3. DESCRIPTION OF THE MISSING PART
4. PART NUMBER OF THE MISSING PART
5. QUANTITY OF THE PARTS MISSING
6. SERIAL NUMBER OF THE UNIT PURCHASED  
(LOCATED ON UNDERSIDE OF TOP OF UNIT)










POST DETAILS AS REQUESTED IN 1-6 INCLUSIVE TO:-

CRITERION FURNITURE (NZ) LTD,  
P.O. BOX 58-646,  
GREENMOUNT,  
AUCKLAND 1730,  
NEW ZEALAND.

MAKE SURE YOU INCLUDE YOUR ADDRESS, \_\_\_\_\_


IMPORTANT:- MISSING PARTS CANNOT BE REPLACED UNLESS THE INFORMATION REQUESTED ABOVE IS FULLY SUPPLIED.




# Hardware Contents:

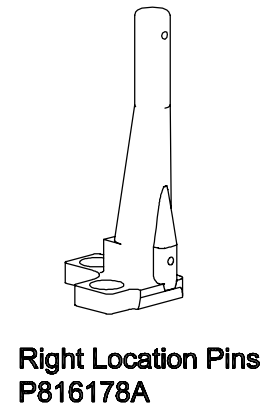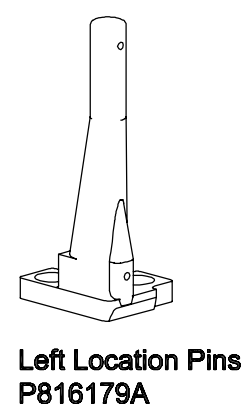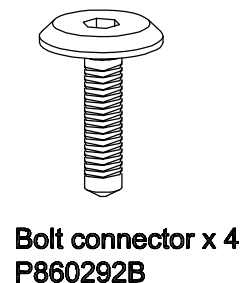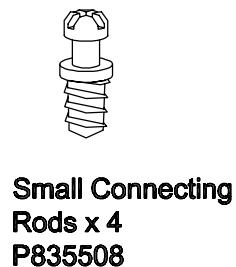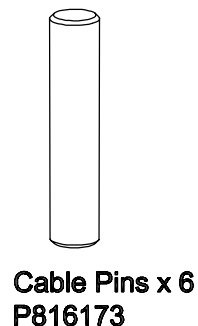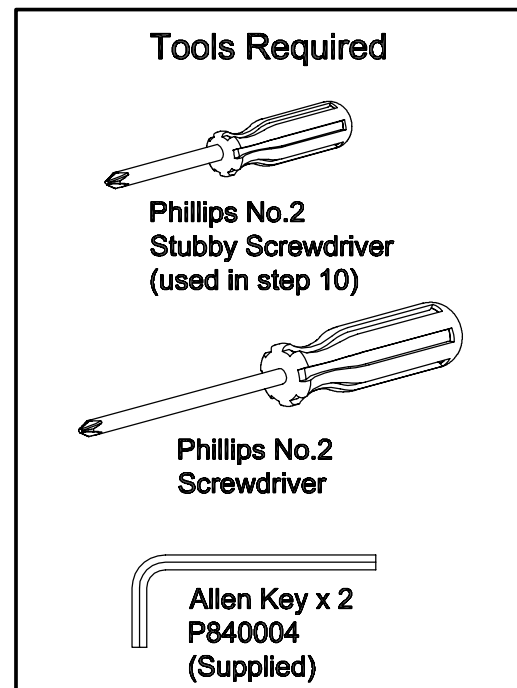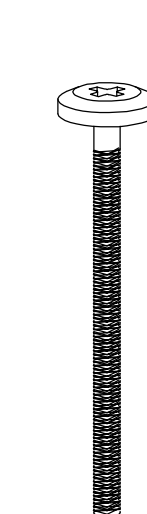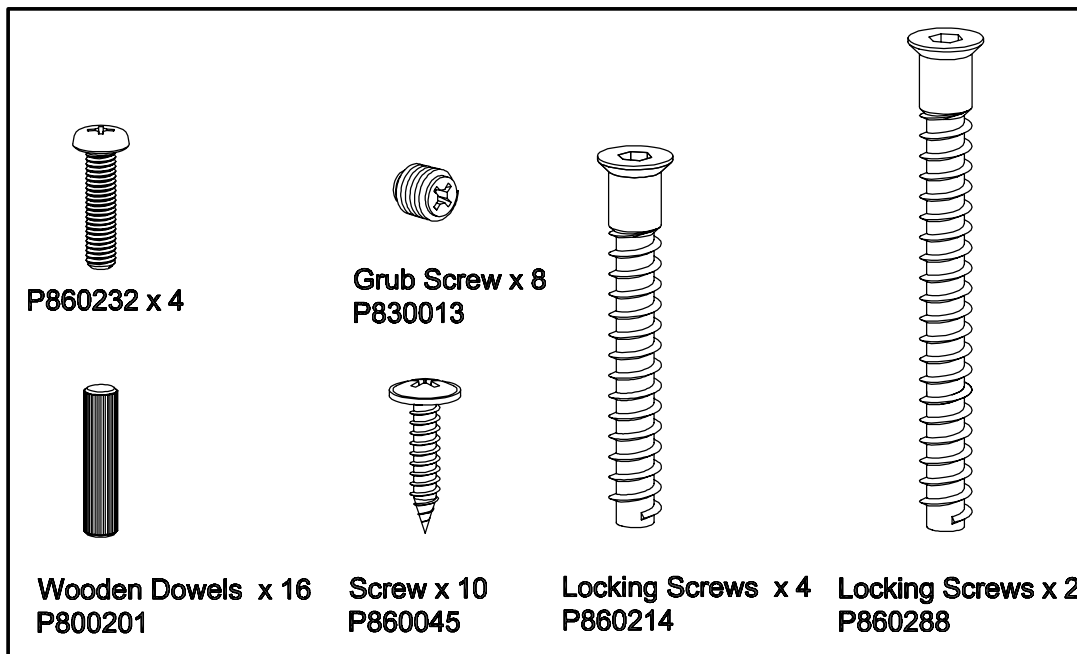

## STEP 1


  
P860045 x10

  
P800201 x 16

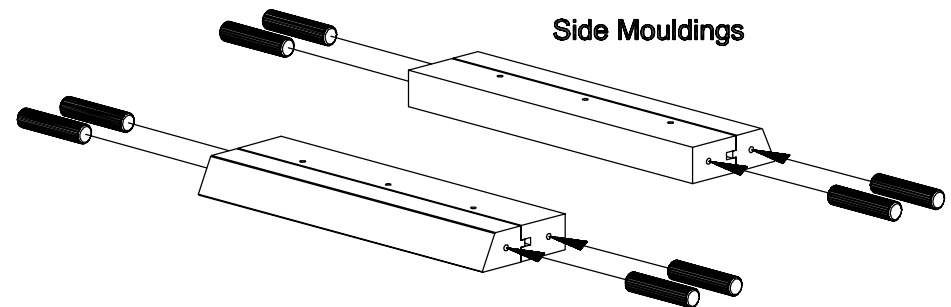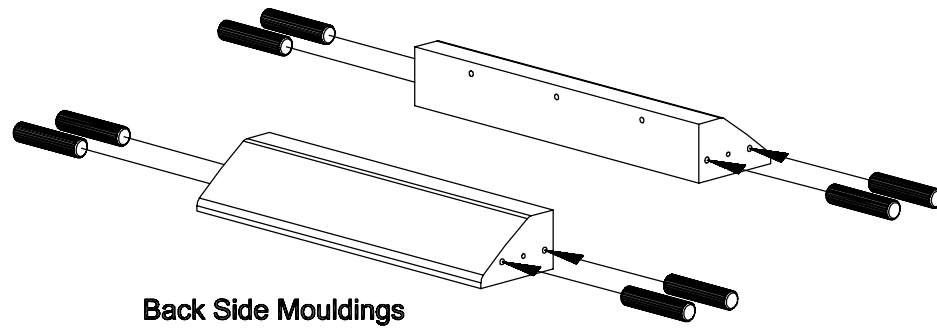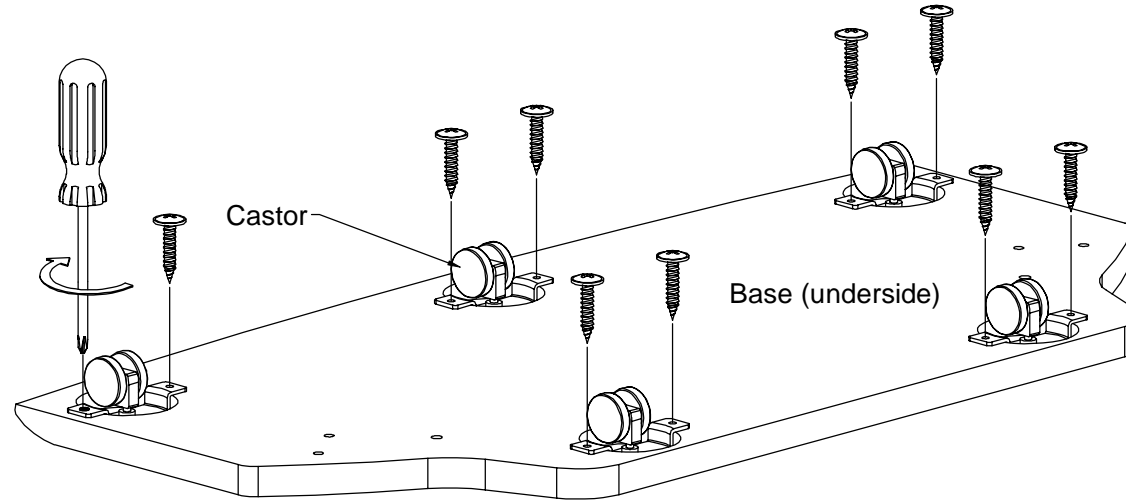


1. Fasten 5 Castors to the Base as shown.
2. Insert Wooden Dowels as shown above.

## STEP 2

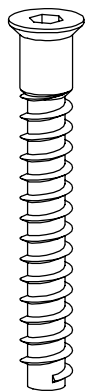


P860214 x 2


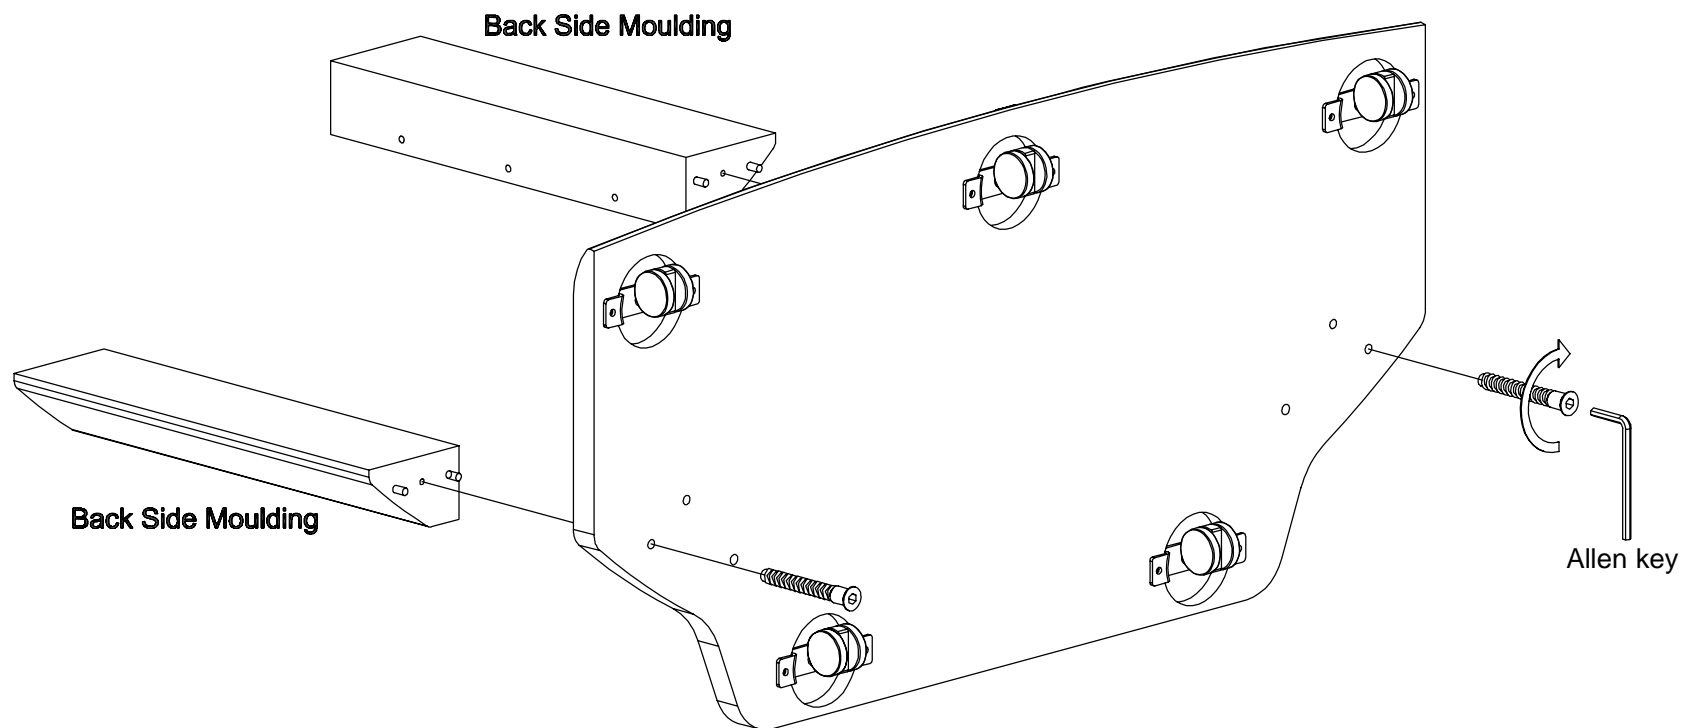


1. Fasten the Back Side Mouldings to the Base as shown.

## STEP 3




P816173 x 6

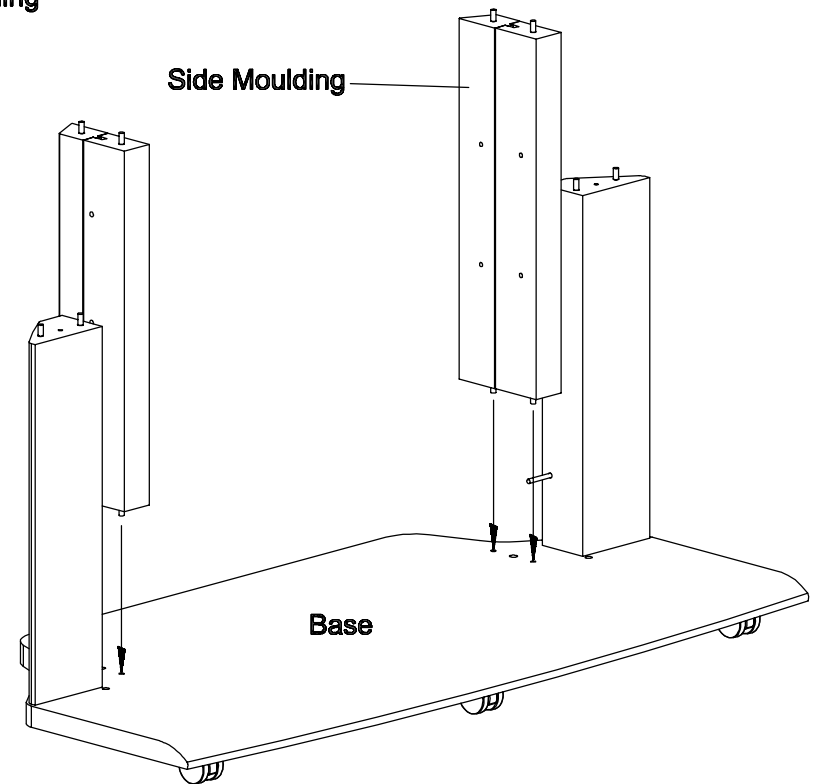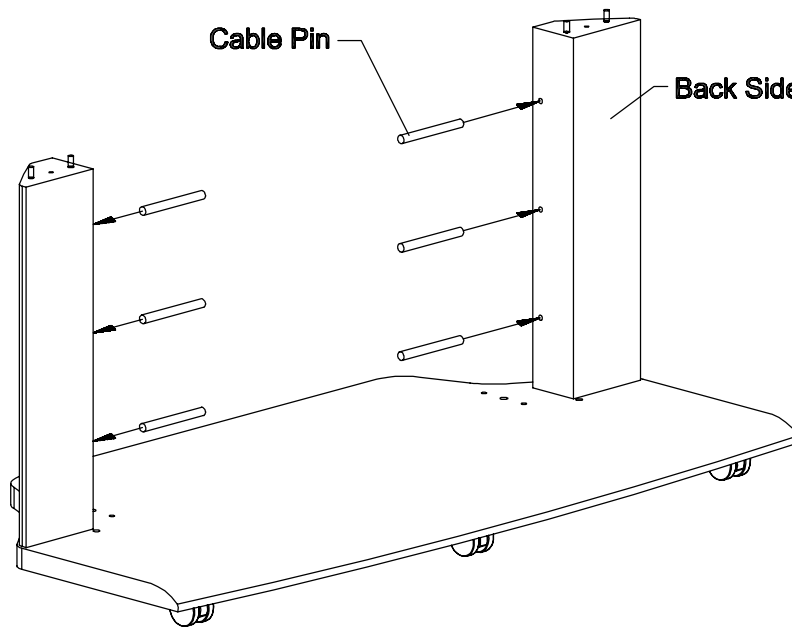


1. Fully insert 6 Cable Pins into the holes in the sides of the Back Side Mouldings as shown.
2. Fit Side Mouldings to the Base as shown.

## STEP 4

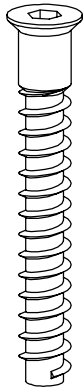


P860214 x 2

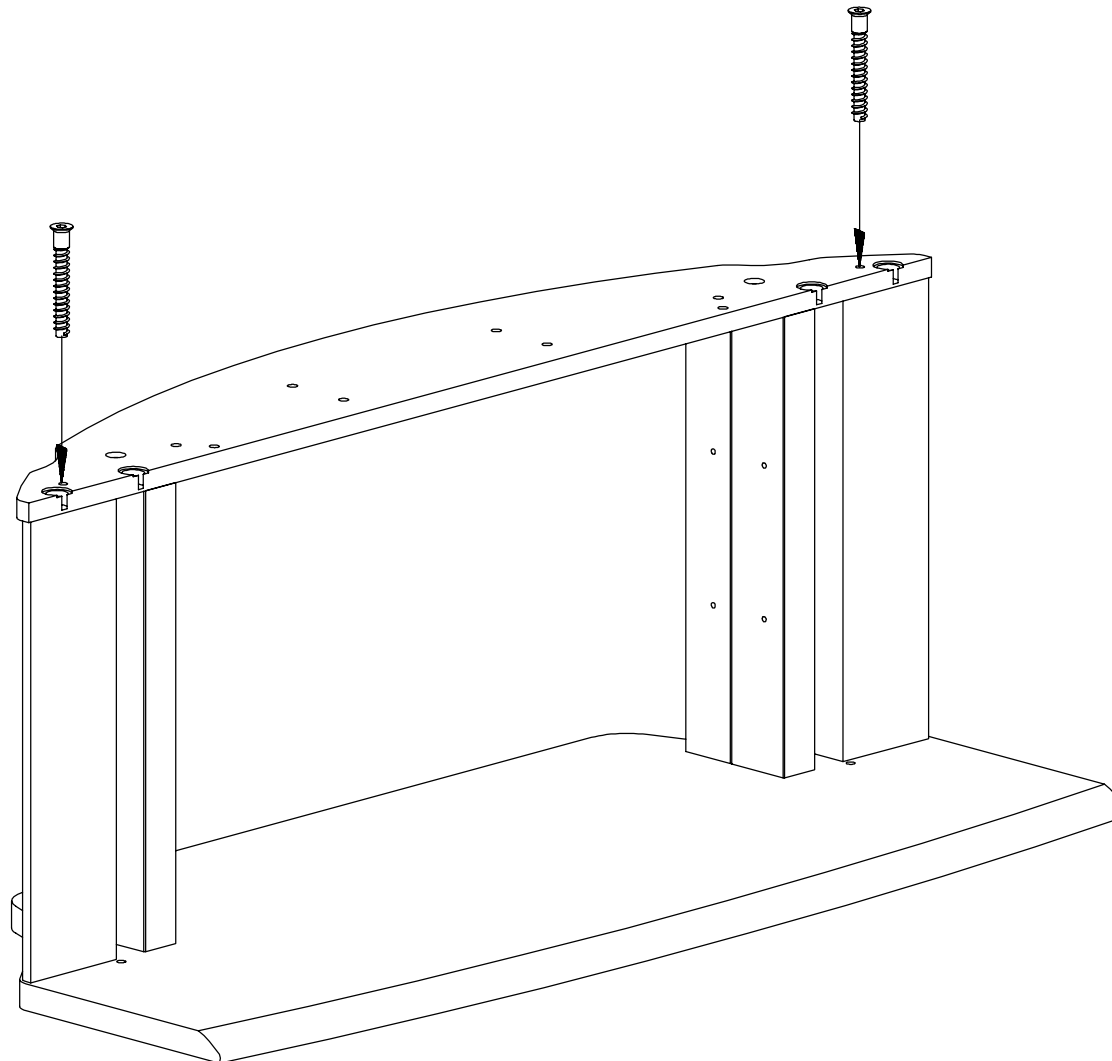

1. Secure Top to Back Side Mouldings with 2 Screws as shown.


## STEP 5

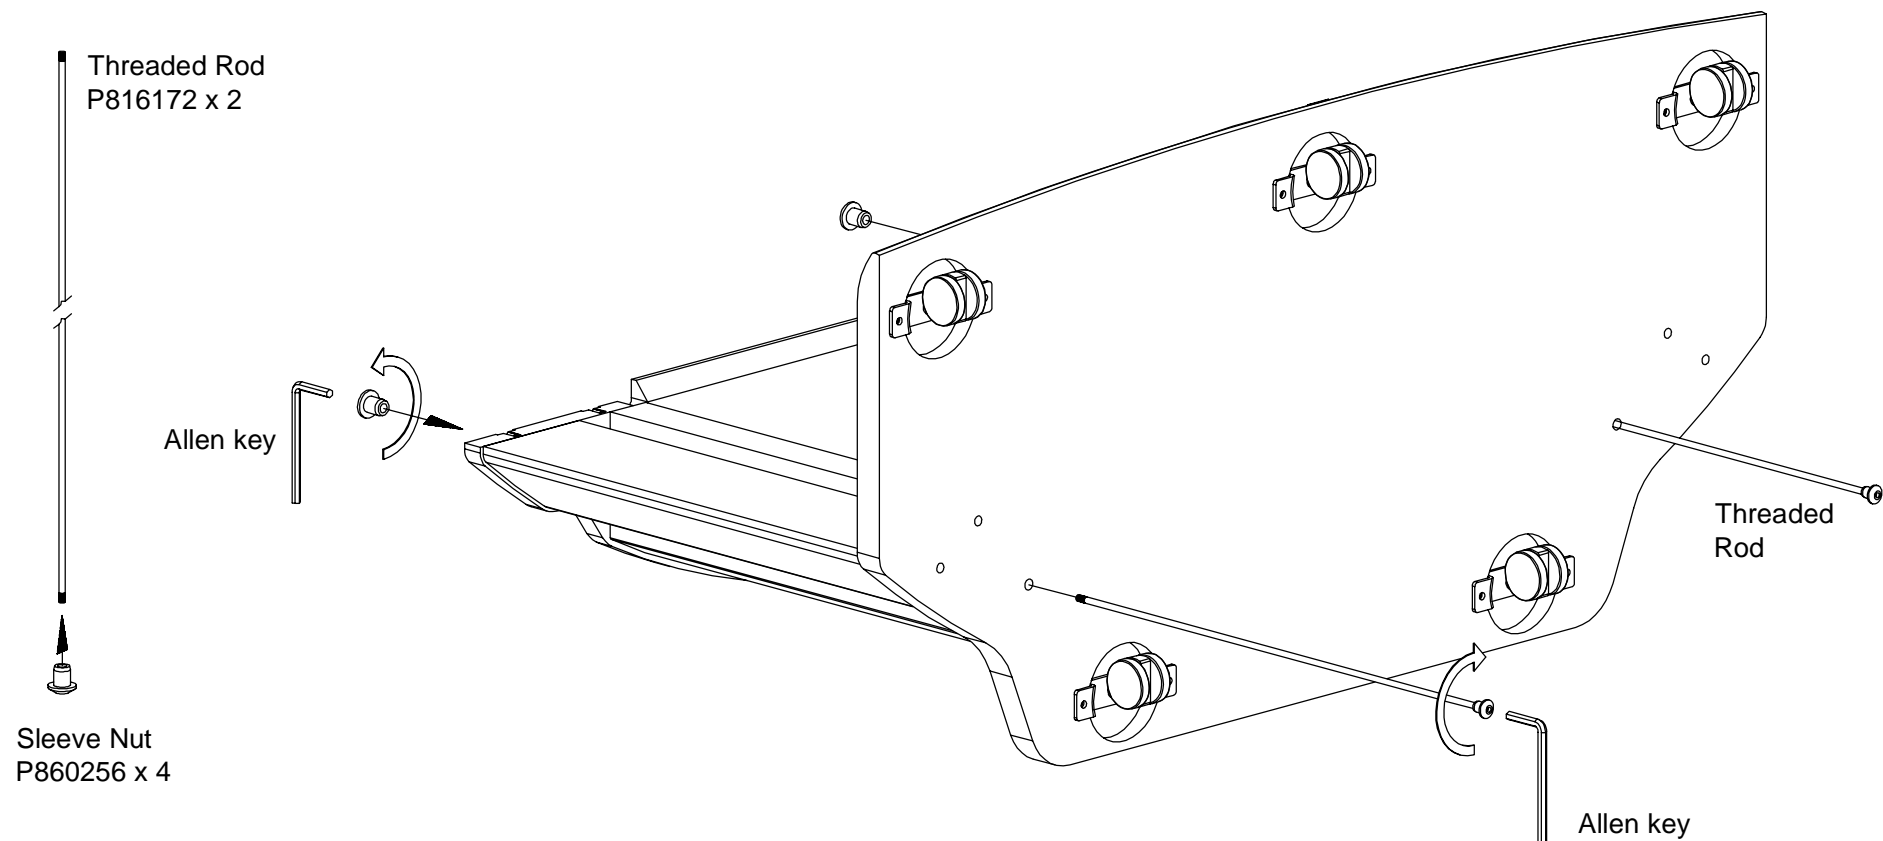

1. Fit Sleeve Nut at one end of each Threaded Rod using an Allen Key.
2. Insert Threaded Rod into Assembly through Base as shown.
3. Fit another Sleeve Nut at other end of Threaded Rod from Top and tighten it turning both Allen Keys in opposite direction of each other.




## STEP 6


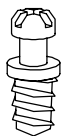


**P835508 x 4**

**Small Connecting  
Rods**

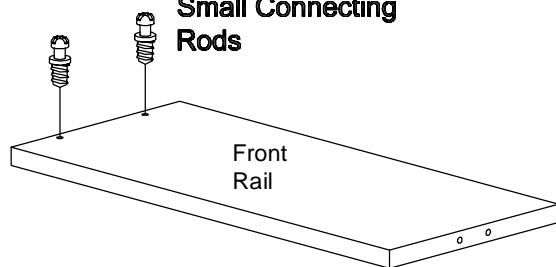


Front  
Rail

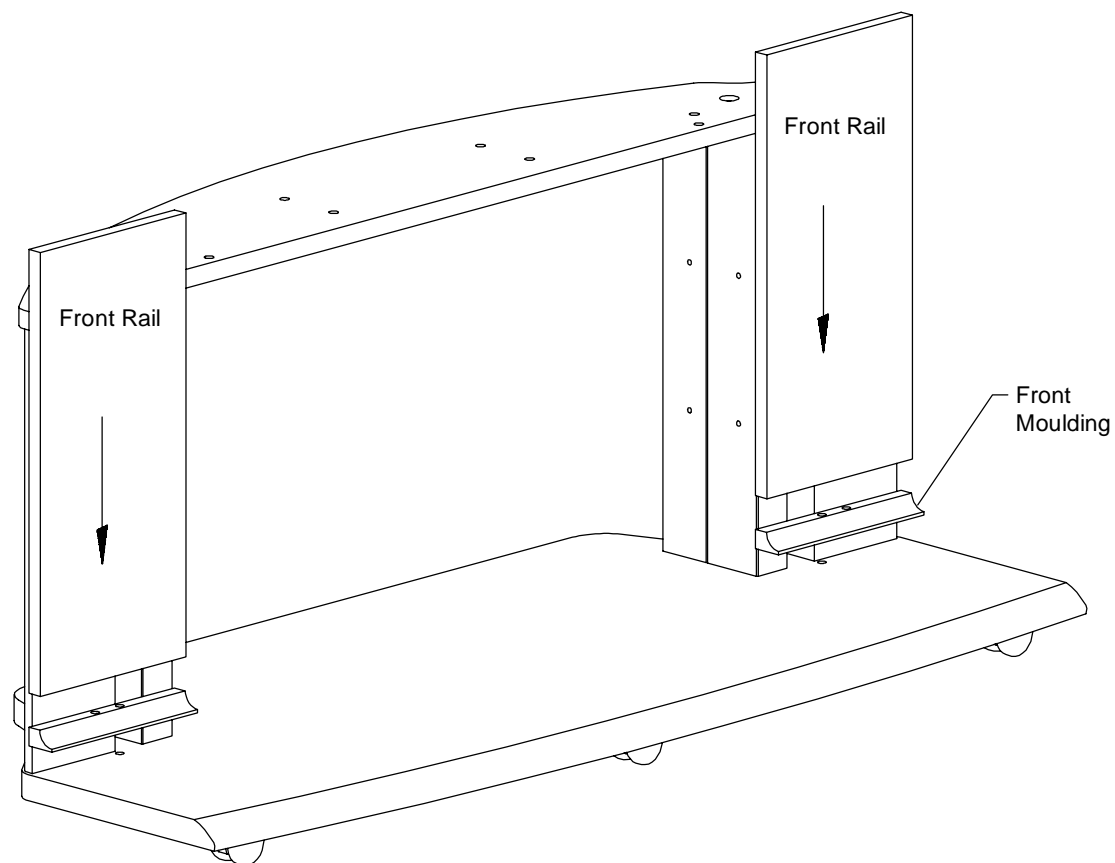
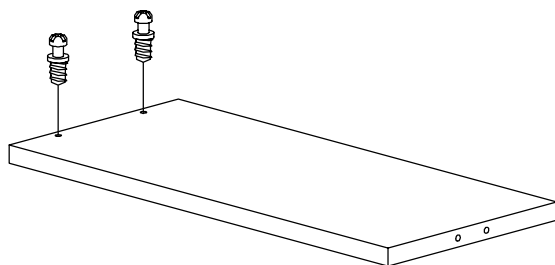


1. Fit 2 Small Connecting Rods to each Front Rail as shown.
2. Fit Front Mouldings to Base as shown.
3. Fit Front Rails on to Front Mouldings as shown.

## STEP 7

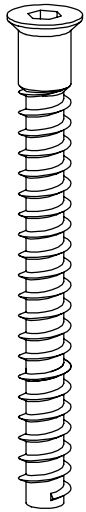


**P860288 x 2**

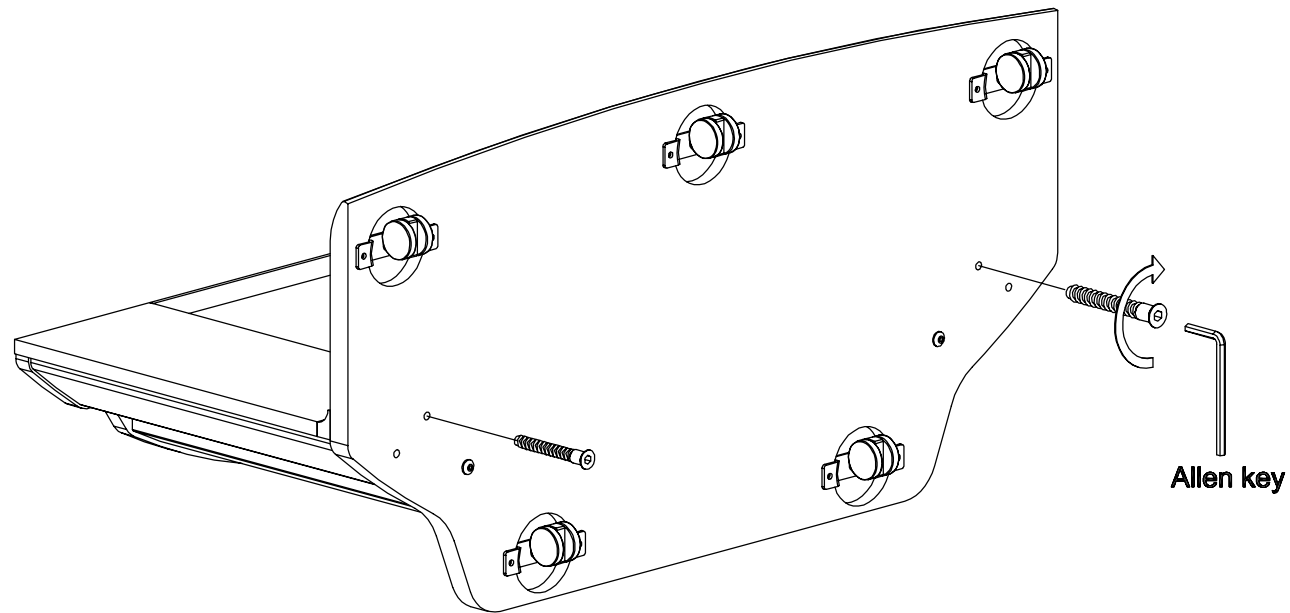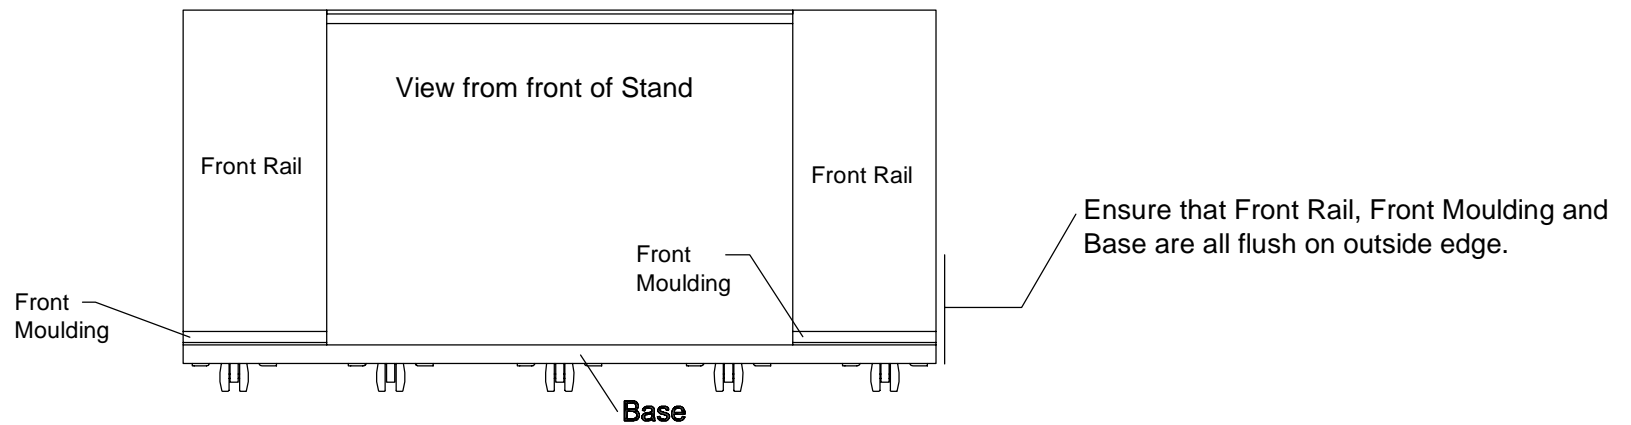

1. Fasten the Front Rails and Front Mouldings to the Base while holding them flush with outside edge of Stand using 2 Locking Screws.

## STEP 8

**CAUTION DO NOT OVER TIGHTEN.**

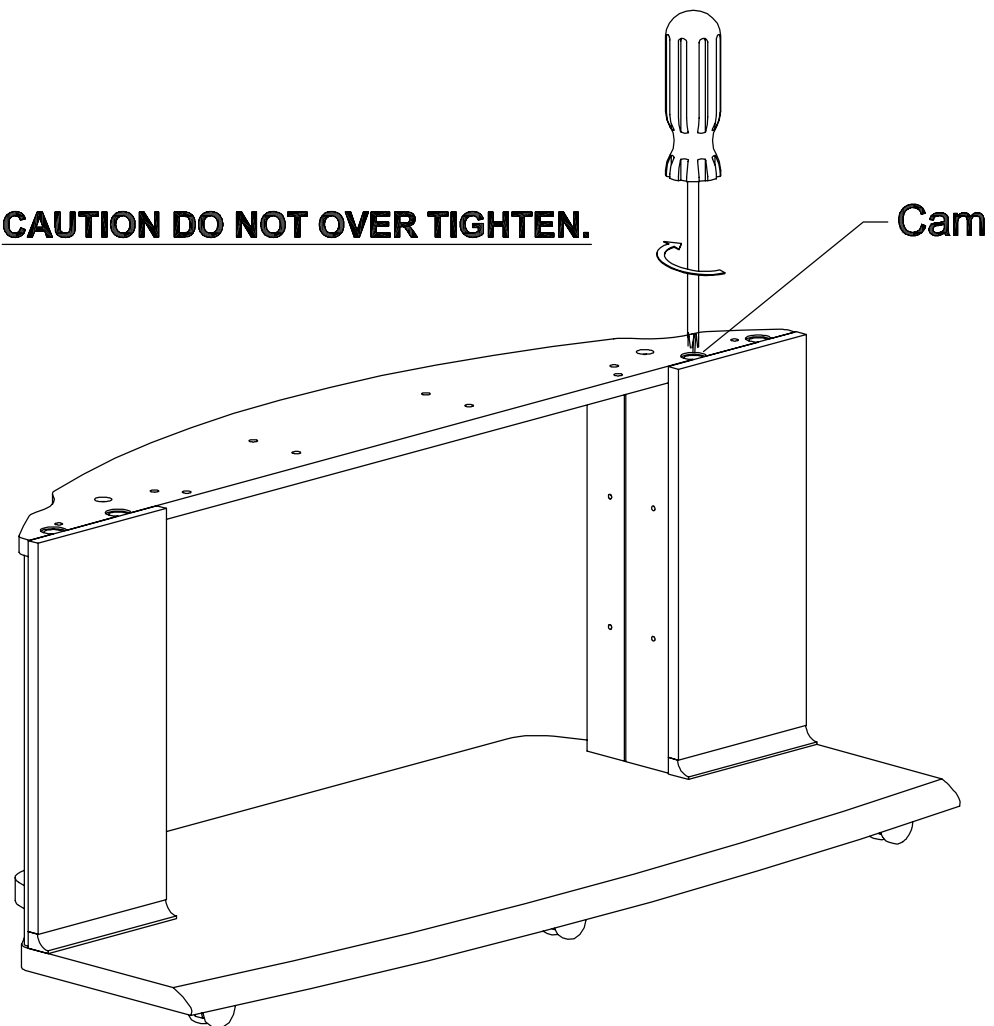


1. Tighten the 4 pre-fitted Cams in Top, by turning them clockwise.

## STEP 9





P860246 x 8

Left Glass Bracket x 2

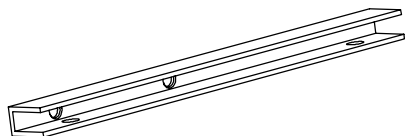

Right Glass Bracket x 2

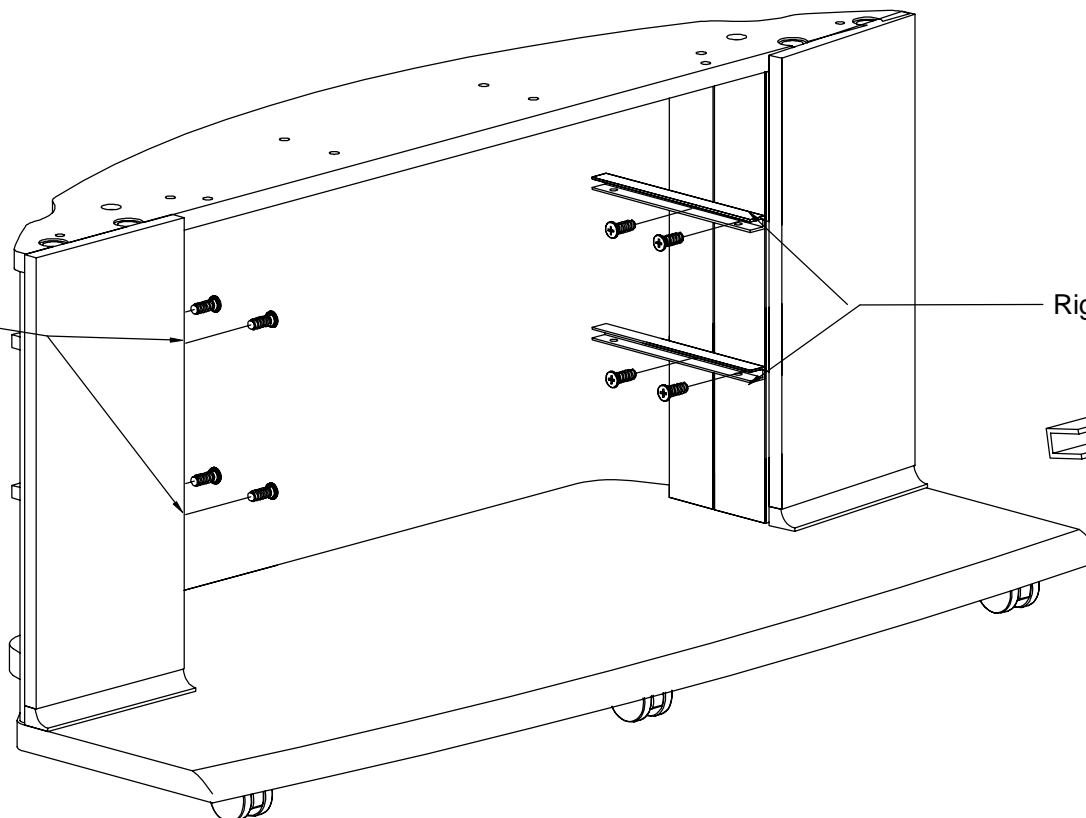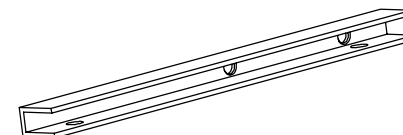


1. Fasten the Glass Brackets to Side Mouldings using Screws as shown.

## STEP 10




P830013 x 8

**Flush at Back Edge**

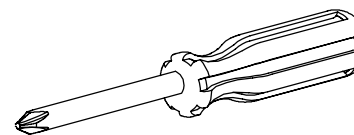

Use a stubby screw driver in this step

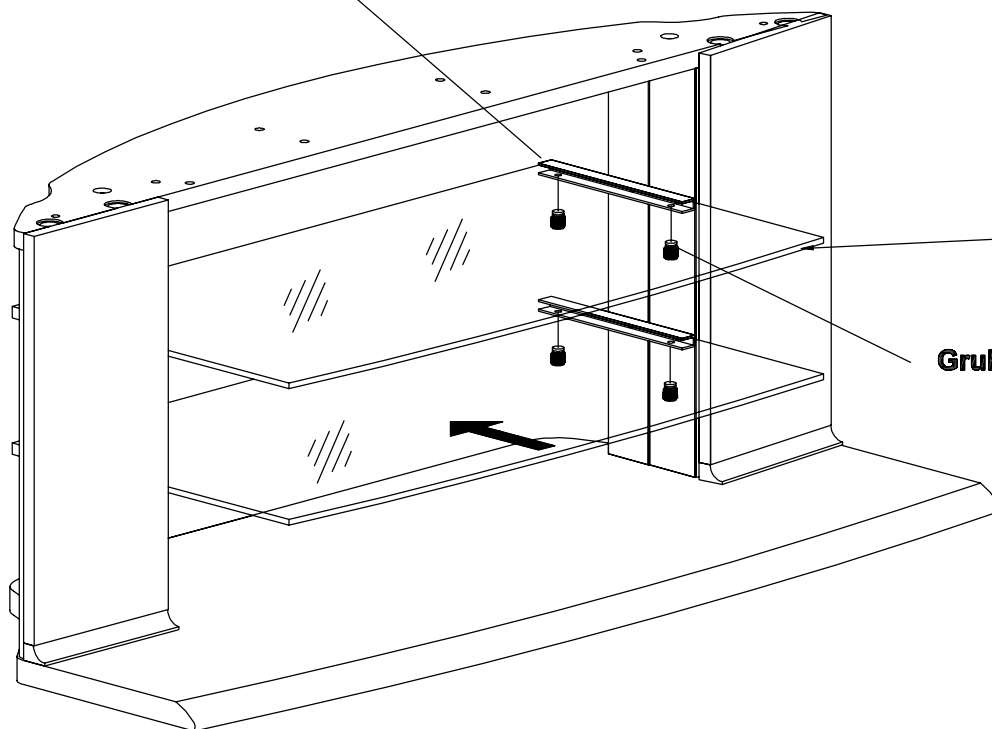


The curved part of the Glass should be at the front.

**Grub Screw**


1. Slide each Glass Shelf into Glass Brackets and tighten Grub Screws from the underside of brackets as shown, make sure the Back Edge of Glass Shelf is flush with Glass Bracket.

## STEP 11

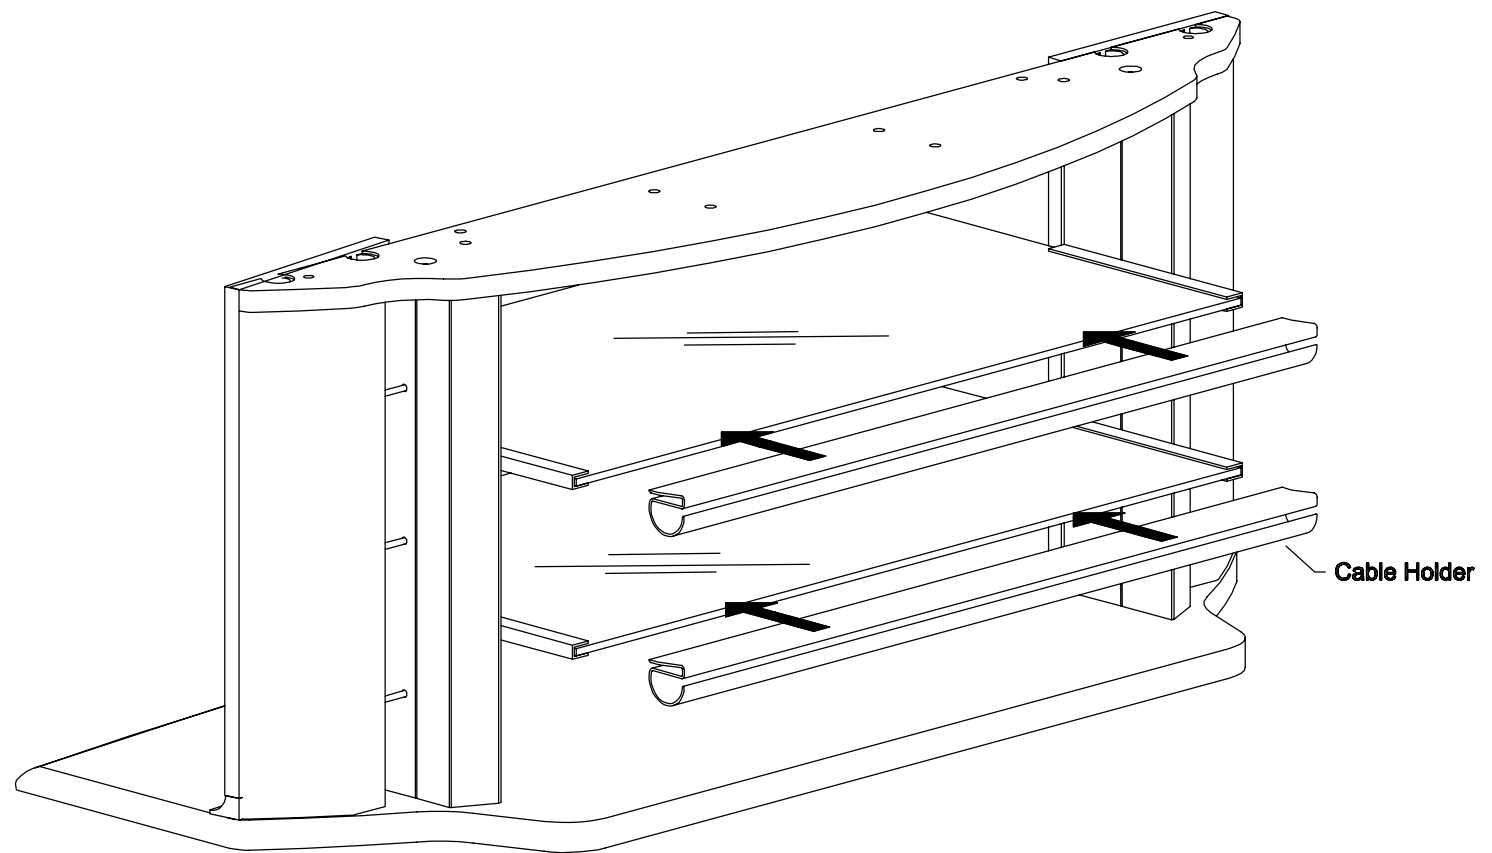

1. Slide fit each Cable Holder onto the Back Edge of each Glass Shelf.


## STEP 12

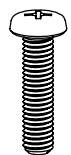

P860232 x 4





The shaded surfaces should be held **flush** against each other while fastening the pins.

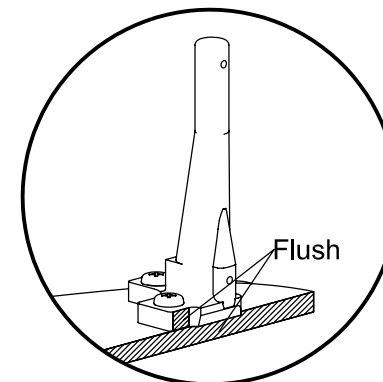

Right Location Pin


Left Location Pin

Packer

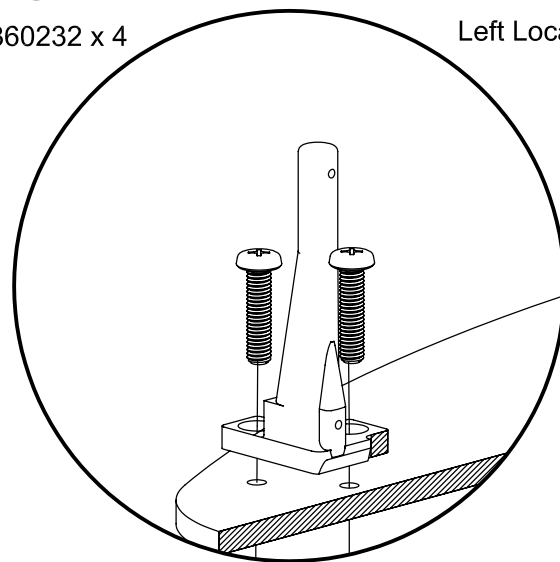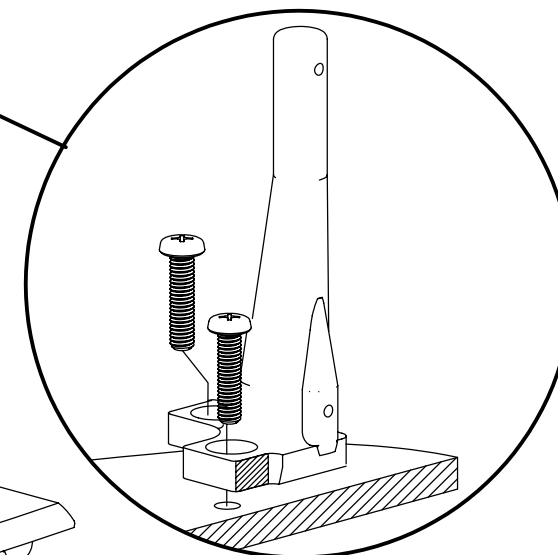


1. Place packer on Top ensuring the holes on the packer align with the holes on Top.
2. Fix the Pins to the Packer and Top with bolts as shown. Ensure shaded parts of the location pins and the packer are held flush when fastening Location pins.

## STEP 13

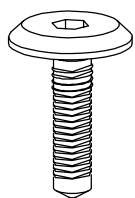

P860292B x 4

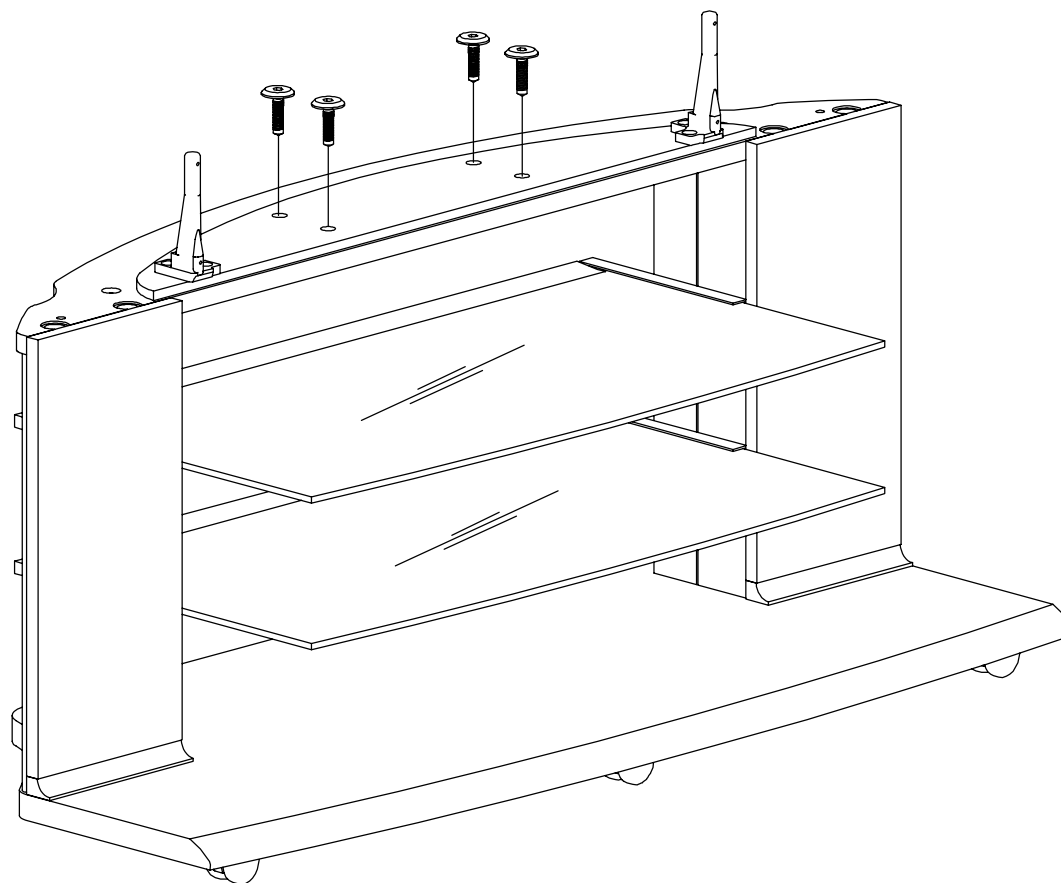

1. Secure the Packer to the Top further with the bolts as shown above.



## STEP 14


**CAUTION TWO PERSON LIFT.**




**P860102 x 4**





**P860101 x 4**

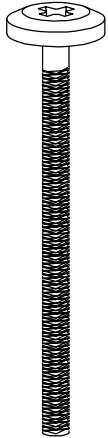

**P820031 x 4**

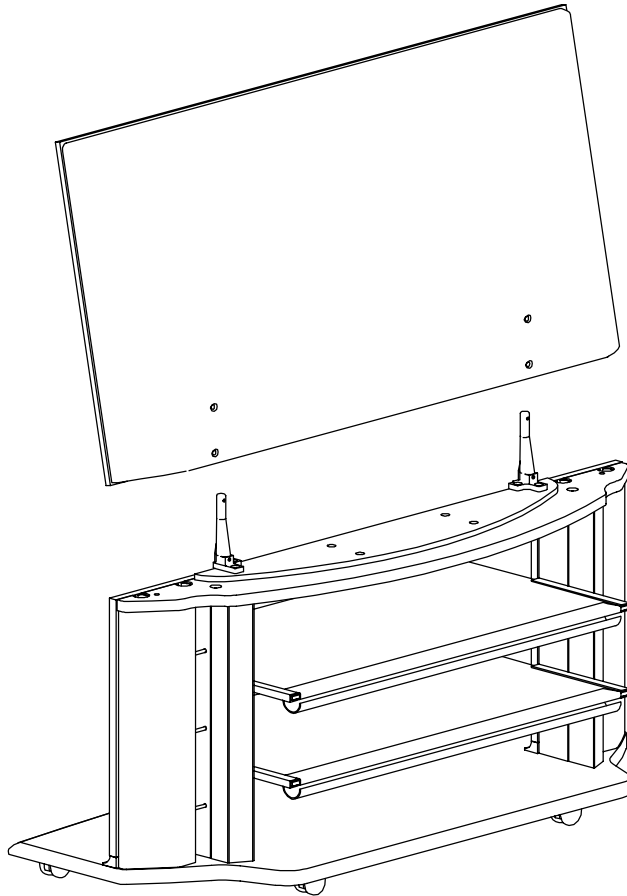

Ensure TV is standing straight on the stand before you tighten the bolts.

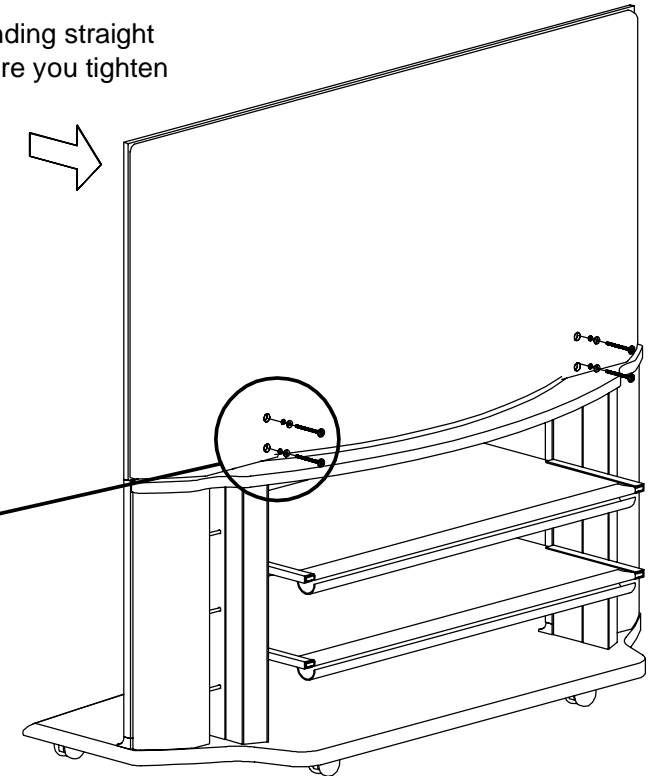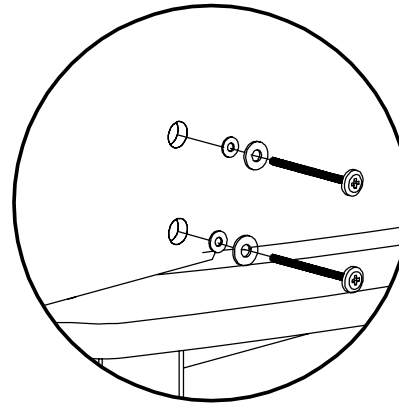

1. With help of an Assistant, lift the Television onto Pins ensuring that the Pins line up with the Holes in base of Television.
2. While Gently pushing the Plasma TV back to ensure the TV is standing straight on the stand, tighten the TV with the Bolts as shown below.

## STEP 15


### CABLE MANAGEMENT

Once Cables are behind Pins,  
slide the Cable Pins across into  
the Side Moulding.

Place Cables from Electronic  
Equipment into Cable Holder.

Back Side Moulding

Side Moulding

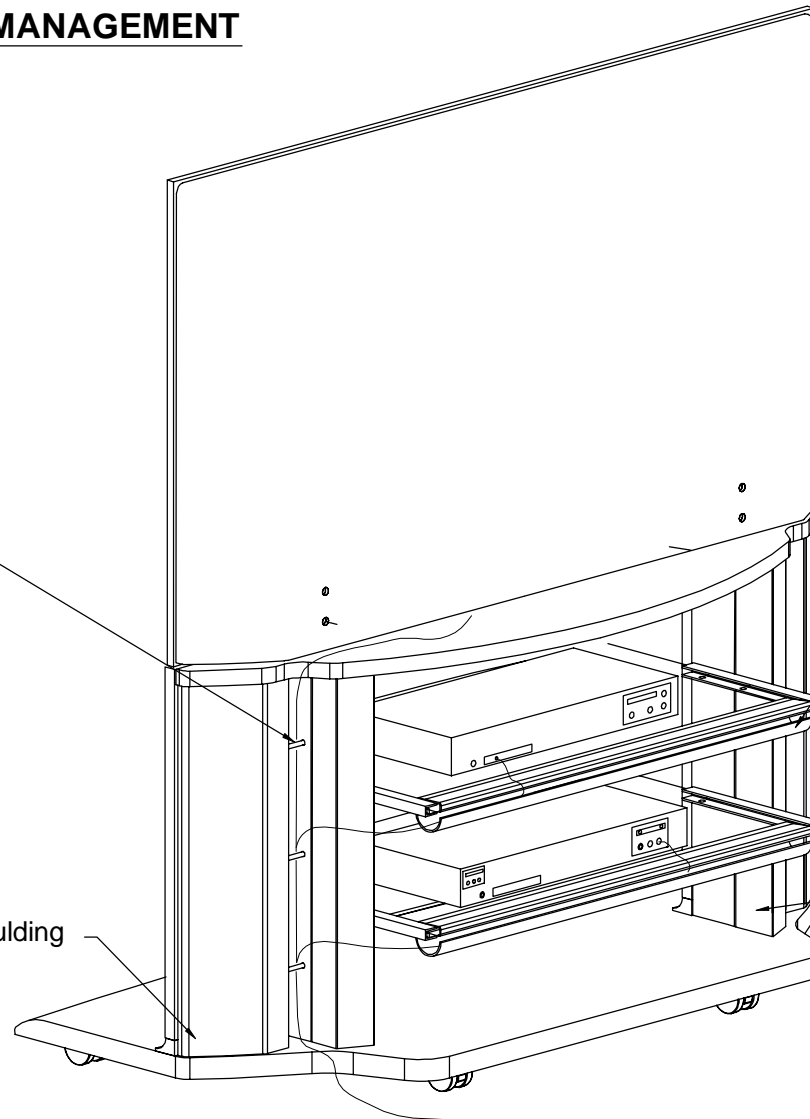

1. With Cable Pins pushed into Back Side Mouldings, place Cables behind pins, then slide Pins across into the Side Mouldings.  
Congratulations you have now finished the assembly for your Panasonic Television Stand.